


ASSEMBLY AND INSTALLATION INSTRUCTIONS

- 1. UNPACK ALL THE FRAME COMPONENTS AND LAY OUT THE (4) ALUMINUM STANDEE FRAME SEGMENTS ON THE FLOOR IN A RECTANGULAR CONFIGURATION.
- + Insert and loosely fit all aluminum frame connection screws.
- Assemble the TOP corners of the frame using (8) of the 35mm button cap screws with the large, 1" diameter washers and nuts (4 in each of the corners). NOTE: do not over-tighten the screws in the top corners; doing so could lead to frame damage.
- + Assemble the BOTTOM of the frame using the (4) gusset plates and the
 (8) 35mm button cap screws with washers and nuts. There should be a gusset plate on the front and back of each bottom corner.

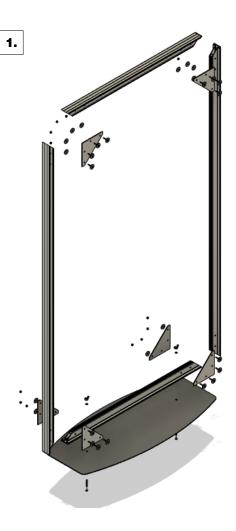

2. ATTACH THE FRAME TO THE BASE.

- + Insert the (2) 2.5" long screws up through the holes in the bottom of the base and lay it flat on the floor.
- + Attach the frame to the base by aligning the screw holes that are in the bottom of the frame with the screws that are protruding from the base.
- + Place the (2) lock washers over the screws and tighten down the frame to the base using the (2) wingnuts.
- + Be sure to tighten the base connection screws with screwdriver; do not hand tighten wingnuts.





2.



FABRIC PRINT INSTALLATION INSTRUCTIONS

INSTALL THE FABRIC PRINT INTO THE FRAME.

Lay the frame on floor to install fabric panels (this is not necessary, but often helps).

- 1. Install the BOTTOM SECTION of the silicone edging first.
- 2. Install the top section second.
- 3. Install the sides third.
- 4. If needed, a typical credit card will help with the edges. Begin by inserting the rubber silicon edging into the channel edge of the Infinity frame. Start at the center of each side and work to the corners. The print is fabric and designed to stretch for best presentation.

Once all (4) sides of the fabric print have been installed into the channel, smooth out the fabric along each side.

Disassembly Recommendation: Remove the frame from the base, leaving the frame intact for easy storage. Remember to keep hardware with the frame.



Shown with optional Attaché[™] brochure holder









